



BANNERUP[®]

A Family of Dependable Displays

TENSION ADJUSTMENT

All cassettes are pretensioned before delivery.



If adjustment is needed, hold the cassette firmly in place then depress and turn the adjusting screw clockwise to increase the tension (the tension mechanism adjusts in halfturn increments). Slowly release pressure on the screw turning slightly counter-clockwise and allow it to again lock in place. If tension has been lost completely, we recommend 20-25 full clockwise turns.

IMPORTANT

Always **roll the banner slowly** in and out of the cassette, and be sure to **centralise** the feed in to avoid edge damage to the graphic. This is particularly important for unlaminated (unprotected) banners. You may also need to steady the cassette, with a foot, as the recoil is quite strong.