


Method One:


Slide-in top rail Graphic Installation Instruction



1. Draw a line on the graphic back. The line is 7.8 cm /3.1" away from the graphic top edge.

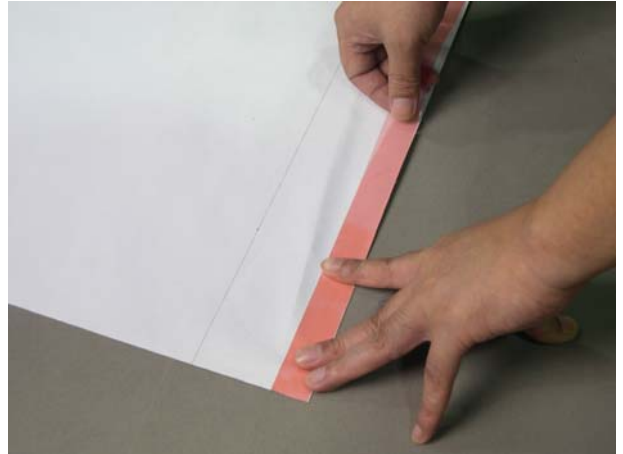


2. Stick the tape on the edge.

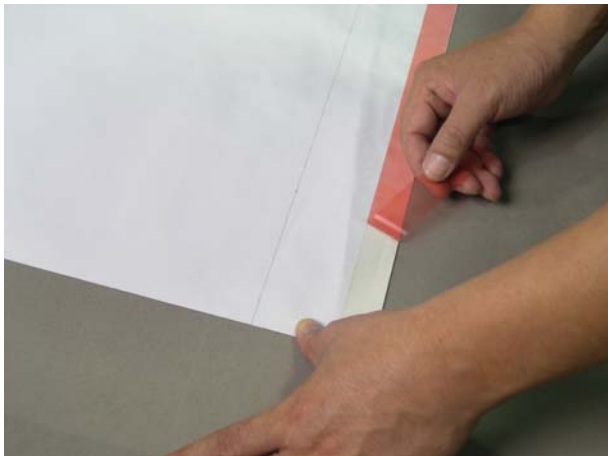


3. Peel off the protective film by about 5 cm /2.0".



4. Fold the graphic top over and stick it onto the graphic back along the line you have drawn.

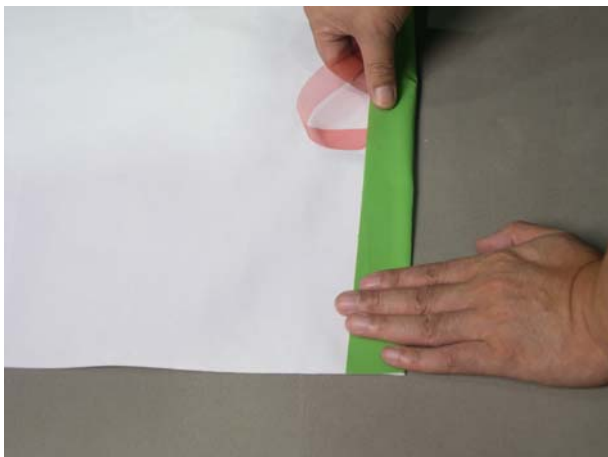


5. Stick the graphic together while peeling off the protective film inch by inch.

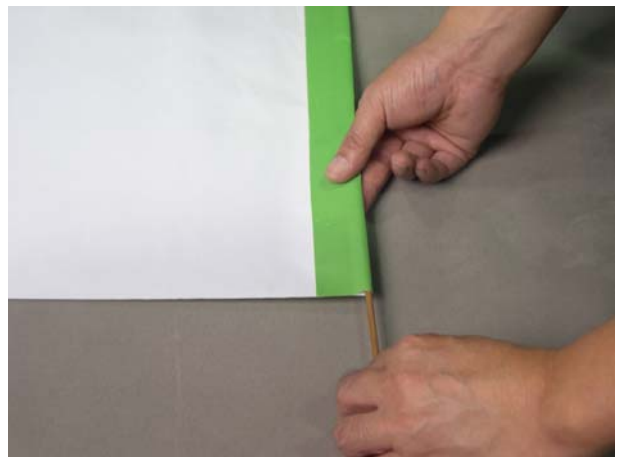

6. Insert the rod into the loop.

Method One:

Slide-in top rail Graphic Installation Instruction

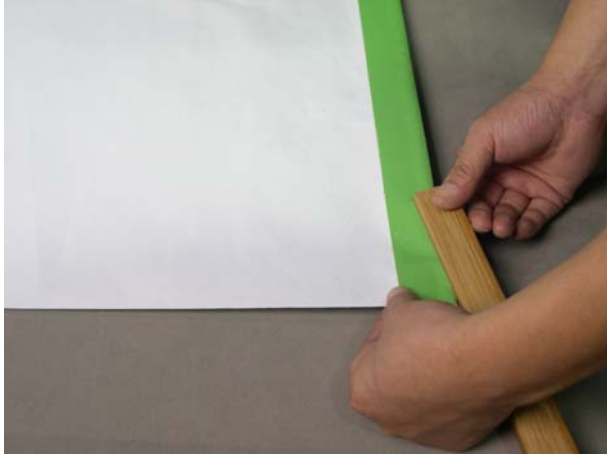

7. Slide the top of the graphic in the top rail inch by inch.



8. Until it is completed

Method Two:


Tape-on Graphic Installation Instruction



1. Place the top rail on a flat surface, with the TESA tape side facing up.



2. Peel off the protective film from the top rail.

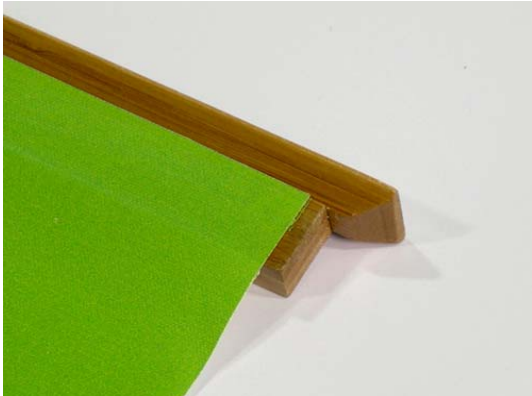

3. Keep the graphic edge 2mm /0.1" away from the top rail edge.



4. Stick the graphic inch by inch onto the top rail.